


Quick guide — — Remote Touch



No.	Name	Function	Page
1	“MENU” button	Push this button to display the “Start” (menu) screen.	17
2	“$\wedge \cdot \vee$” button	Push this button to change the scale of the map and to scroll the list screen.	31, 35, 47
3	“MAP/VOICE” button	Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position.	38
4	Remote Touch knob	Move this knob in the desired direction to select a function, letter and map screen button.	31
5	“ENTER” button	Push this button to enter the selected function, letter or map screen button.	31
6	“DISP” button	Push this button to display the “Display” (quality control) screen.	36

— Map screen

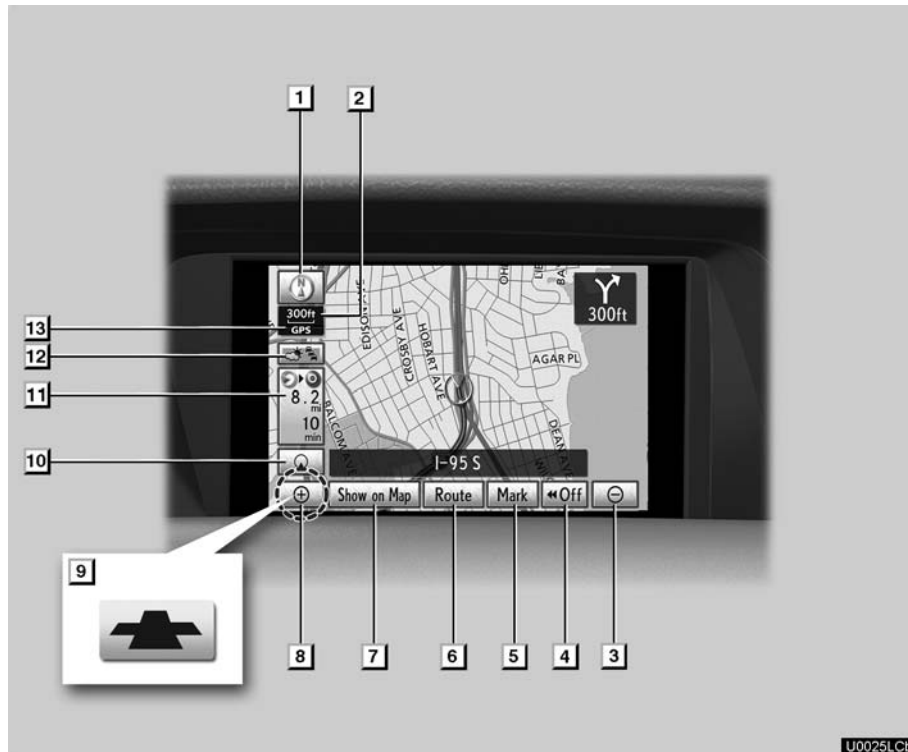

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Selecting this symbol changes the map orientation.	48
2	Scale indicator	This figure indicates the map scale.	47
3	Zoom out button	Select this button to reduce the map scale.	47
4	“◀◀Off”	Select this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by selecting “On▶▶” .	334
5	“Mark”	Select this button to register the current position or the cursor position as an address book entry.	40
6	“Route”	Select this button to change the route.	98, 100

No.	Name	Function	Page
7	“Show on Map”	Select this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	106, 112
8	Zoom in button	Select this button to magnify the map scale.	47
9	Foot print map button	Select this button to display the foot print map and the building information.	47
10	Screen configuration button	Select this button to change the screen mode.	44
11	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	97
12	XM® indicator	This mark is displayed when XM® information is received.	112
13	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	393

 
— Registering home



1 Push the “MENU” button.



2 Select “Destination” and push the “ENTER” button.

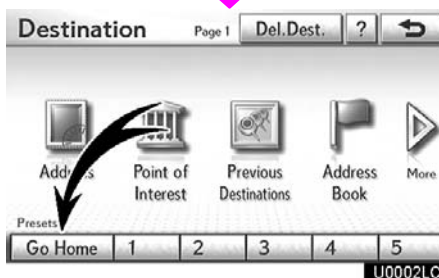

3 Select “Go Home” and push the “ENTER” button.

If home has not been registered, you can register it by selecting “Go Home”.




4 Select “Yes” and push the “ENTER” button.



U0004LC



U0005LC

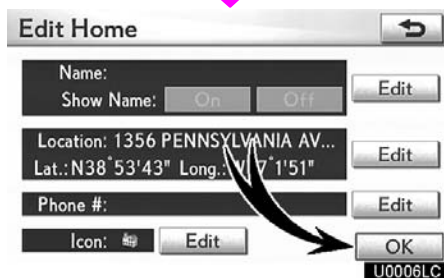

U0006LC

5 There are 4 different methods to search your home.

See "Destination search" on page 66.

6 Select "Enter" and push the "ENTER" button.

The "Edit Home" screen is displayed.

7 Select "OK" and push the "ENTER" button.

Registration of home is complete.

You can also register home by selecting "Setup". (See " (a) Registering home" on page 117.)

You can change the name, location, phone number and icon. (See " (b) Editing home" on page 118.)

 
— Registering preset destinations



1 Push the “MENU” button.



2 Select “Destination” and push the “ENTER” button.

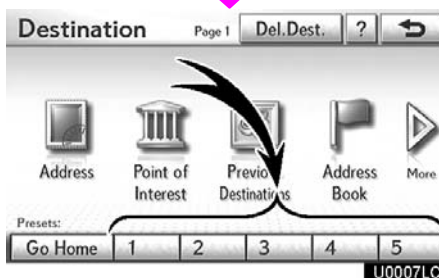

3 Select one of the preset destination buttons and push the “ENTER” button.

You can set a preset destination to any preset destination button that has not yet been set.



4 Select “Yes” and push the “ENTER” button.



5 There are 4 different methods to search preset destinations.

See "Destination search" on page 66.



6 Select "Enter" and push the "ENTER" button.

The "Edit Preset Destination" screen is displayed.



7 Select "OK" and push the "ENTER" button.

Registration of preset destinations is complete.

You can also register preset destinations by selecting **Setup**. (See " (a) Registering preset destinations" on page 120.)

You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 121.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 68.)

 
— Operation flow: guiding the route



1 Push the “MENU” button.




2 Select “Destination” and push the “ENTER” button.

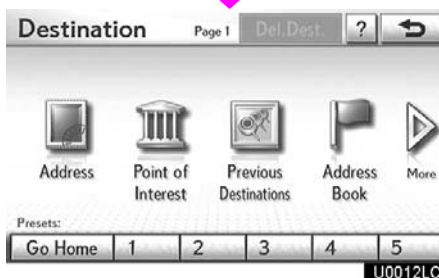

3 There are 10 different methods to search destinations.

 See “Destination search” on page 66.

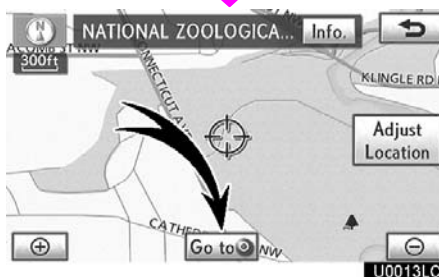

4 Select “Go to” and push the “ENTER” button.

The navigation system performs a search for the route.



- 5 Select “OK” and push the “ENTER” button, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 86.)

- 6 Guidance to the destination is given via voice and on the guidance screen.

 
— Setting home as the destination



1 Push the “MENU” button.




2 Select “Destination” and push the “ENTER” button.

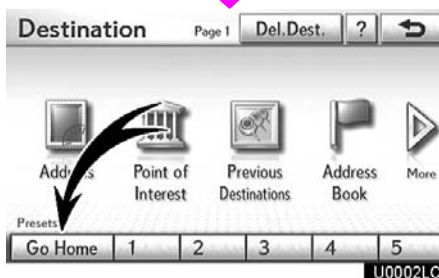

3 Select “Go Home” and push the “ENTER” button.

 “Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 117.)

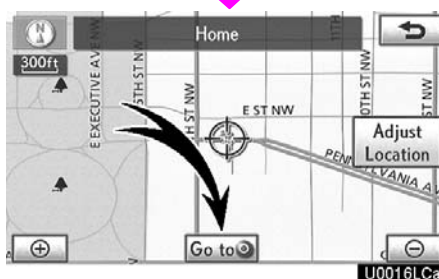

4 Select “Go to ” and push the “ENTER” button.

The navigation system performs a search for the route.



 
- 5 Select “OK” and push the “ENTER” button, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 86.)

- 6 Guidance to the destination is given via voice and on the guidance screen.**

Quick reference (“Start” screen)

To display the “Start” screen, push the “MENU” button on the Remote Touch.

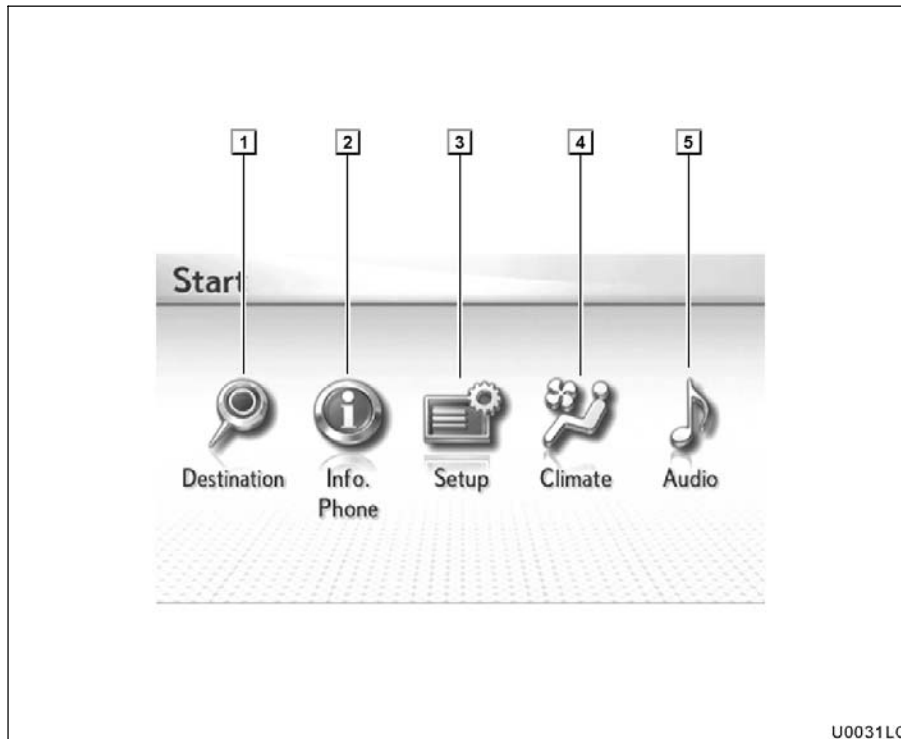

1 “Destination”

You can use one of 10 different methods to search your destination. 18, 65

2 “Info./Phone”

Select this button to operate the hands-free system and display fuel economy information, etc. 21, 135

3 “Setup”

Select this button to adjust settings of the navigation, audio and hands-free systems, etc. 20, 316

4 “Climate”

 
Select this button to operate the air conditioning system. 278

5 “Audio”

Select this button to operate the audio system. 163

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the **“MENU”** button and select **“Destination”**.

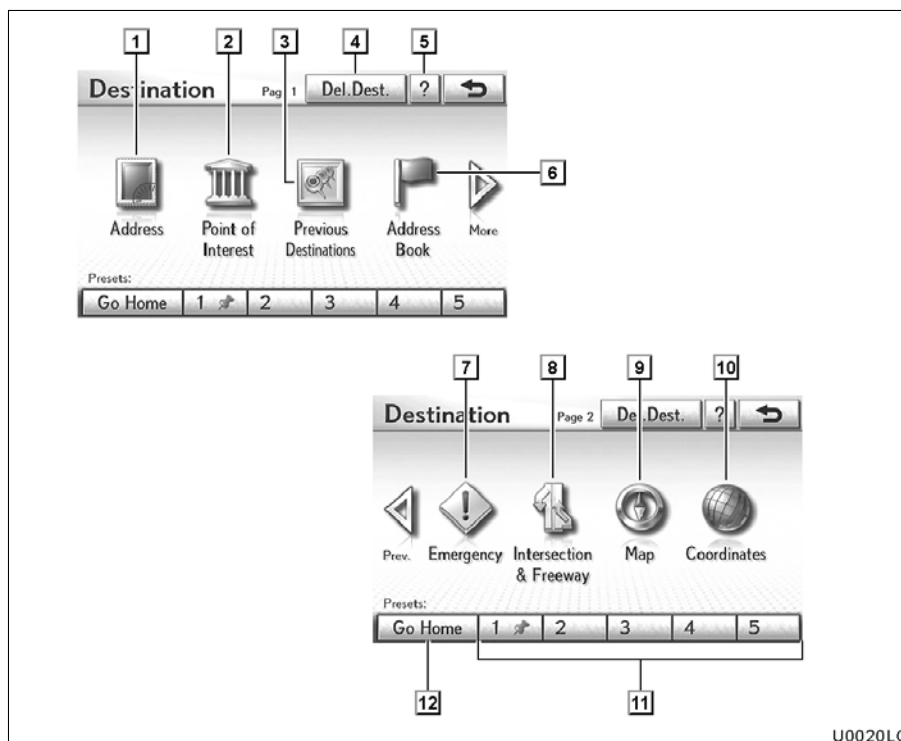

1 “Address”

A house number and the street address can be input by using the input keys.

..... 69

2 “Point of Interest”

Select one of the many Points of Interest that have already been stored in the system’s database. 73

3 “Previous Destinations”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point.

..... 79

4 “Del. Dest.”

Set destinations can be deleted. 85

5 “?”

Function help for the “Destination” screen can be viewed on this screen. 38

6 “Address Book”

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 123.)

..... 80

7 “Emergency”


One of the four categories of emergency service points that are already stored in the system’s database can be selected.

..... 80

8	“Intersection & Freeway”	
	The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known.	
	81
9	“Map”	
	A destination can be selected simply by selecting the location on the displayed map.	
	84
10	“Coordinates”	
	A destination can be set using latitudes and longitudes as coordinates.	
	85
11	Preset destination buttons	
	One of 5 preset destination points can be selected by selecting the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “preset destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 120.)	
	68
12	“Go Home”	
	A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 117.)	
	68

Quick reference (“Setup” screen)

 The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button and select “Setup”.

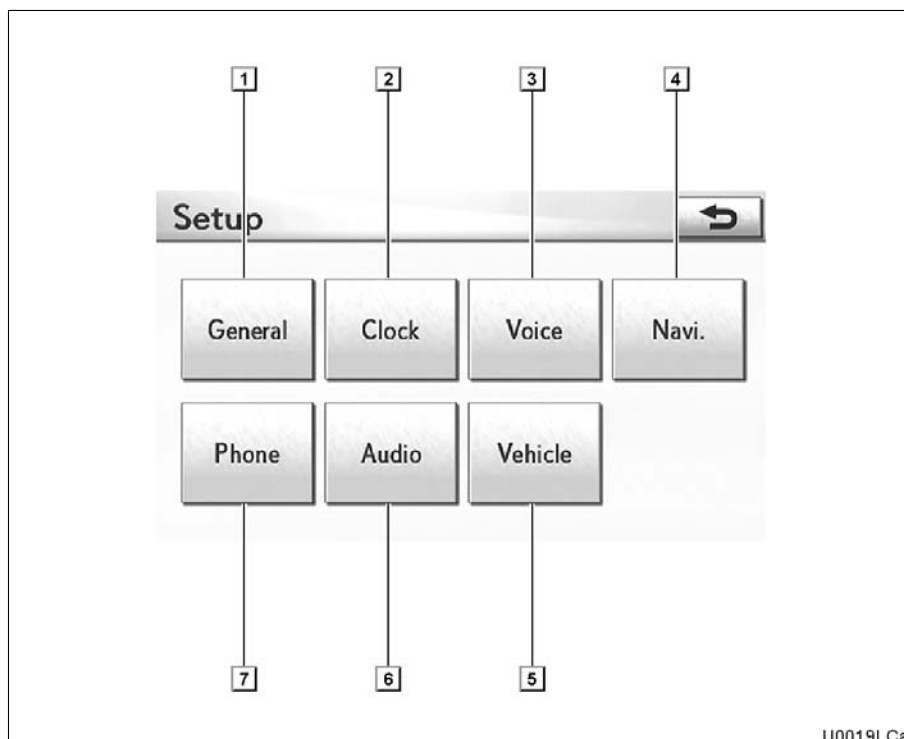

1 “General”

Settings are available for language selection, operation sounds, automatic screen change, etc. 317

2 “Clock”

Used for changing settings for time zones, daylight saving time, etc. 323

3 “Voice”

Voice guidance can be set. 325

4 “Navi.”

Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. 328

5 “Vehicle”

Settings are available for vehicle information such as maintenance information. 384

6 “Audio”

 
Settings are available for portable audio devices, Bluetooth® audio devices etc. 376

7 “Phone”

Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. 338

Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the “**MENU**” button and select “**Info./Phone**”.

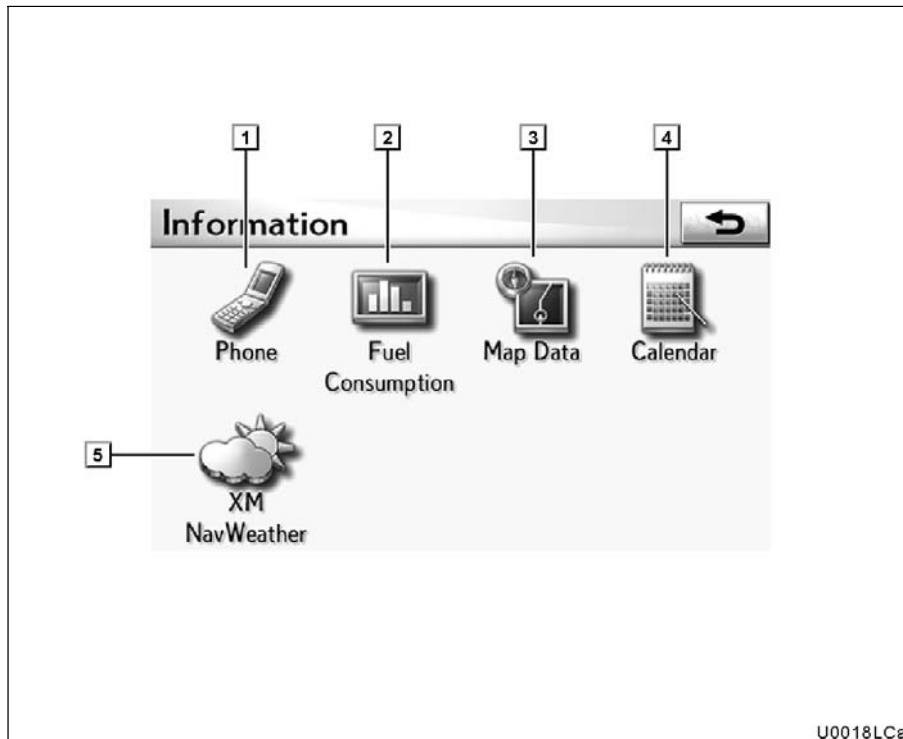

U0018LCa

1 “Phone”

To view hands free phone information.
..... 140

2 “Fuel Consumption”

Fuel consumption is displayed. 155

3 “Map Data”

Displays information regarding the map data disc version or coverage area.
..... 404